



SpringWell

WATER FILTRATION SYSTEMS



Installation Instructions

CIK Single Tank Installation Kit

COMPATIBLE MODELS: CF1, CF4, FS1, FS4



CUSTOMER SERVICE IS AVAILABLE MON-FRI 9AM-6PM EST



800-589-5592

WWW.SPRINGWELLWATER.COM

Single Tank Installation Kit Setup and Installation


System Contents



John Guest
ProLock Male Connector



John Guest ProLock
Stem Connector

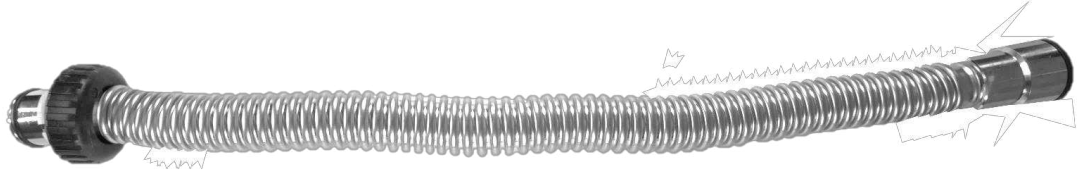

24" Clack to slip Connectors
(x2)

Recommended Supplies



1 Roll Plumbers Tape



Pipe Dope

Compatibility




Compatible with Red
handled Bypass Valves



MNPT Fittings provided
with tanks will not be
required

System Configuration

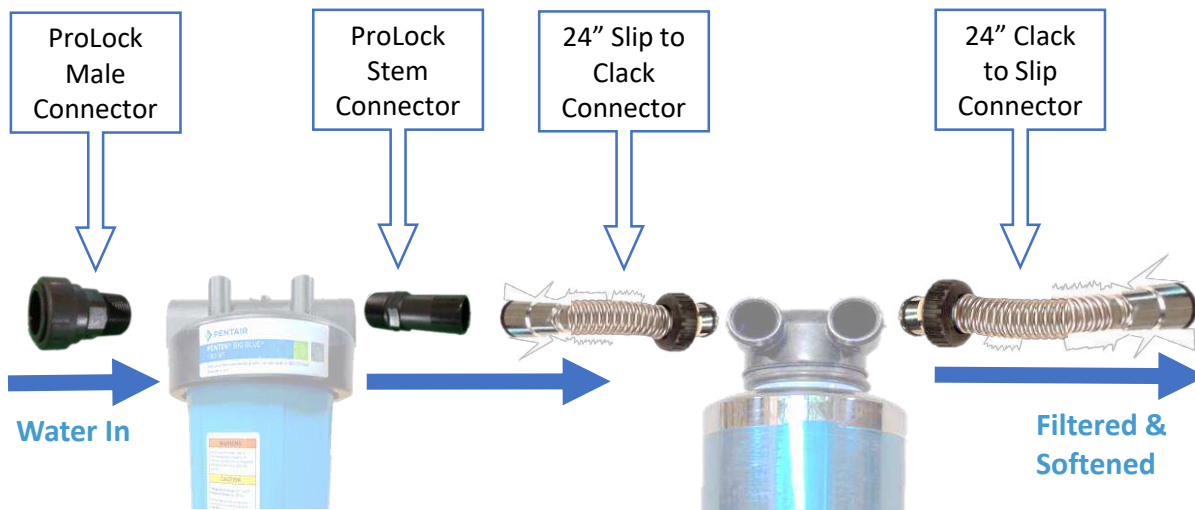

Single Tank Installation Kit

Installing ProLock Connectors

This step will require the materials listed below



John Guest
ProLock Male Connector



1 Roll Plumbers Tape



Pipe Dope



John Guest ProLock
Stem Connector



1) Apply plumbers' tape to the ProLock male connector.



2) Apply pipe dope around the applied plumbers' tape.



3) Identify the Inflow side of the pre-filter housing



4) Thread the ProLock male adapter threads into the inflow side of the pre-filter housing.



5) Fully tighten the ProLock male adapter with a wrench.



6) Apply plumbers' tape and pipe dope to the threads on the ProLock stem connector.




7) Thread the ProLock stem connector threads into the outflow side of the pre-filter housing. Fully tighten with a wrench.

Single Tank Installation Kit

Installing Water Connectors

This step will require the materials listed below

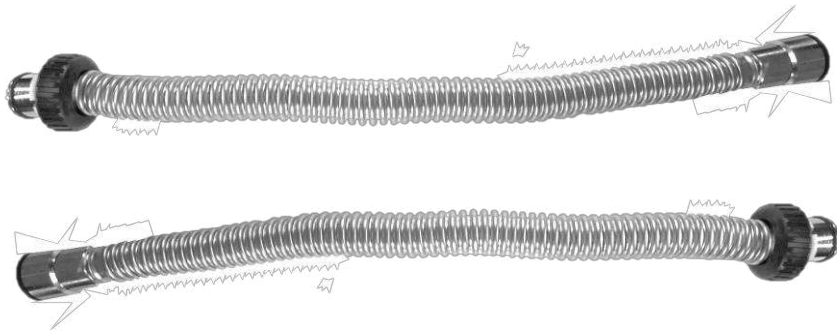

24" Clack to slip Connectors
(x2)



8) Ensure the locking ring on the male adapter is loose and not locked..



9) The pre-plumb from the water main will be connected to the inflow side of the pre-filter housing. This is the ProLock male adapter.



10) Turn the locking ring on the ProLock male adapter to lock the pre-plumb connection



11) Test the connection by lightly tugging to ensure it isn't loose.



12) Align the slip connection on a water connector with the stem connector on the other side of the pre-filter housing.



13) Press the slip connection onto the stem connector. Test the connection by lightly tugging to ensure it isn't loose.




14) Identify the inlet side on the tank after the bypass valve has been installed.

Single Tank Installation Kit

Installing Water Connectors



15) Align the clack connector so it can be inserted into the inlet side of the tank.

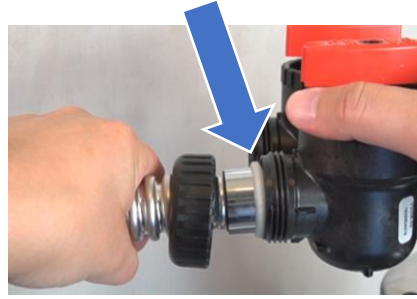

16) Press the connector into the bypass valve until the grey O-ring aligns with the opening on the bypass valve.



17) Fully tighten the collar on the clack connector to secure it in place.



18) Connect the other clack connector to the outlet side of the tank. Be sure to fully tighten.



19) The slip end of that water connector will connect into the pre-plumb leading into the home.



Kit Installation is Complete